OPERATING INSTRUCTIONS FOR ELECTRONIC CLOCK/TIMER

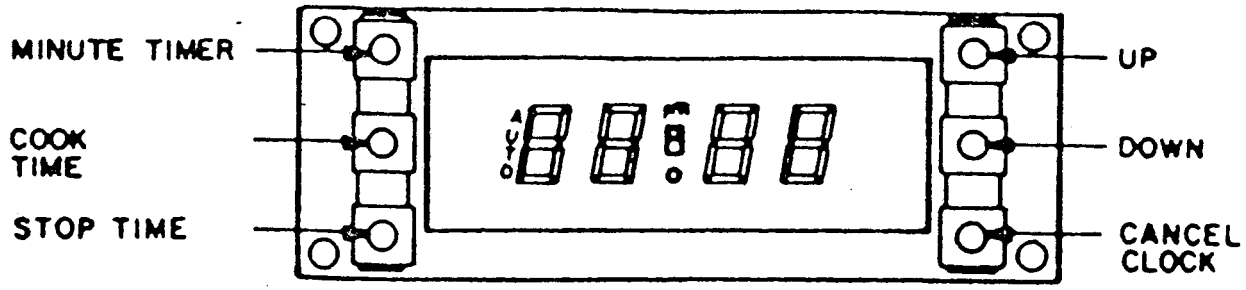

The timer offers a Time-of-Day clock with a PM designation, a Minute Timer with up to 9 hours and 59 minutes, and cook and stop functions.

There are six pushbuttons: MINUTE TIMER, COOK TIME, STOP TIME, UP and DOWN, and CANCEL CLOCK. The UP and DOWN pushbuttons are for time setting.

The clock/timer is a digital clock with a minute timer and automatic control cooking cycle. The clock is set via the buttons. When power is connected to the unit, or a power failure of longer than 3 seconds occurs, the display will show 12 00 flashing at the rate of ½ second on and ½ second off.

NOTE: The **"UP"** and **"DOWN"** buttons must be pressed within 5 seconds after pressing the MINUTE TIMER, COOK TIME, STOP TIME, or CANCEL CLOCK buttons or that selected mode will be cancelled or incorrectly programmed.

Time-of-Day

The clock setting is acheived by depressing the CANCEL CLOCK pushbutton first. Then key in the desired time of day by using the UP and DOWN pushbutton keys. The clock has a PM indicator on the display for the PM time setting. The clock may be switched into and out of miltary time by pressing STOP TIME after pressing and holding COOK TIME.

Minute Timer

1. Press **"MINUTE TIMER"**, then **"UP"** to set desired time in minutes. The maximum time which can be set is 9 hours 59 minutes. A dot will appear in the lower center of the display to indicate the clock is functioning in the timer mode. During the timing countdown, the display will revert to Time-of-Day.

2. When the minute timer times out, the dot will flash and a beeper will sound at a ½ second on and ½ second off rate. To cancel the beeper, press the **"MINUTE TIMER"** button. The dot will go out and the display will revert to Time-of-Day.

3. To cancel the timer before completion of the set time, push the **"MINUTE TIMER"** button and then the **"DOWN"** button until the readout shows 0 00. The dot will disappear and the display will revert to Time-of-Day.

Timed Bake. (Bake Cycle Only)

Semi-Automatic Operation

Oven starts at once and shuts off at the end of the cooking cycle.

1. Turn selector switch knob to AUTO.

2. Turn oven control knob to the desired baking temperature.

3. Press the STOP TIME button.

4. Press **"UP"** button to set desired stop time. The display will read **"AUTO"** on the left side of the display. A "⊟" symbol will appear in the center of the display and the oven indicator light will come on signifying that the timed bake cycle has begun. The display will revert to Time-of-Day.

5. When the desired stop time is reached, the oven indicator light and the "⊟" symbol will go out indicating that the timed bake cycle is complete and the oven has turned off automatically.The **"AUTO"** symbol on the display wil begin flashing and the beeper will sound for 10 seconds.

6. Reset all controls to **"OFF/MANUAL"** after using the programmable timing operation. To remove the clock from the automatic mode, press the **"CANCEL CLOCK"** button. The flashing **"AUTO"** indicator will go out.

Delayed Time Bake

Oven starts at a later time and shuts off at the end of the cooking cycle.

1. Turn selector switch knob to AUTO.

2. Turn oven control knob to the desired baking temperature.

3. Press COOK CLEAN TIME. Display shows 0 00.

4. Press UP to set desired length of baking time. For example, if you wish to delay time bake for 3 hours you would press and hold the UP button until 3 00 appears on display.

5. Press the STOP TIME button.

6. Press UP button to set desired stop time. For example, if you wish to have time bake to finish at 5 o'clock you would press and hold the UP button until 5 00 appears on the display. The clock will automatically calculate the start time. The **"AUTO"** symbol will light on the display to indicate the system is in the automatic mode. The display will revert to Time-of-Day.

7. When the start time is reached, the oven will come on automatically. The "⊟" symbol on the display and the oven indicator light will come on to indicate the oven is on.

8. When the desired stop time is reached, the oven indicator light and the "⊟" symbol will go out signifying that the bake cycle is complete and the oven has turned off automatically. The **"AUTO"** symbol on the display will begin flashing and the beeper will sound for 10 seconds.

9. Reset all controls to **"OFF/MANUAL"** after using the programmable timing operation. To remove the clock from the automatic mode, press the **"CANCEL CLOCK"** button. The flashing **"AUTO"** indicator will go out.

Self-Clean

To start self-clean now:

1. Turn the selector switch knob to the AUTO position. Turn the oven control to the Self-Clean position.

2. Move the latch lever to the right (self-clean) position. The clean indicator light will come on when the latch is closed

3. Press the STOP TIME button.

4. Press the UP button to set the desired stop time. For example, if the display shows 1 00 and you wish to self-clean the oven for 3 hours, you would press and hold the UP button until 4 00 shows on the display. This indicates that a 3 hour self-clean cycle beginning at 1 o'clock would end at 4 o'clock.

5. The oven indicator light and the "⊟" symbol will both come on indicating that the self-clean cycle has begun. The display will revert to Time-of-Day. The **"AUTO"** symbol will light on the display.

6. At the end of the self-clean cycle the oven will go off automatically. The oven indicator light and the "⊟" symbol will both go out to indicate the oven is off. The **"AUTO"** symbol will begin flashing and the beeper will sound for 10 seconds. The clean indicator light will remain on until the latch lever is returned to the left position. However, you should wait about 30 minutes before attempting to unlock the oven door. Do not attempt to force the latch lever to the left position as this could damage the self-clean mechanism.

7. Reset all controls to the **"OFF/MANUAL"** position after using the programmable timing operation. To remove the clock from the automatic mode, press the **"CANCEL CLOCK"** button. The flashing **"AUTO"** symbol will go out. When the latch lever is moved to the left (open) position, the clean indicator light will go out.

Delayed Self-Clean:

1. Turn the selector switch knob to the AUTO position. Turn the oven control knob to the self-clean position.

2. Move the latch lever to the right (self-clean) position. The clean indicator light will come on when the latch is closed.

3. Press the COOK TIME button.

4. Press the UP button to set the length of time you wish to self-clean the oven. For example, if you wish to self-clean the oven for 3 hours, you would press and hold the UP button until 3 00 appears on the display.

5. Press the STOP TIME button.

6. Press the UP button to set the desired stop time of the self-clean cycle. For example, if you wish to have the self-clean cycle to end at 4 o'clock, you would press and hold the UP button until 4 00 appears on the display. The clock will automatically calculate the start time of the self-clean cycle. In other words, a 3 hour self-clean cycle would begin at 1 o'clock and end at 4 o'clock. The **"AUTO"** symbol will appear on the display and the display will revert to Time-of-Day. When the desired start time for the self-clean cycle is reached the oven indicator light and the "⊟" symbol will come on indicating that the oven is on and the self-clean cycle has begun.

7. At the end of the self-clean cycle the oven will go off automatically. The oven indicator light and the "⊟" symbol will both go out to indicate the oven is off. The **"AUTO"** symbol will begin flashing and the beeper will sound for 10 seconds. The clean indicator light will remain on until the latch lever is returned to the left position. However, you should wait about 30 minutes before attempting to unlock the oven door. Do not attempt to force the latch lever to the left position as this could damage the self-clean mechanism.

8. Reset all controls to the **"OFF/MANUAL"** position after using the programmable timing operation. To remove the clock from the automatic mode, press the **"CANCEL CLOCK"** button. The flashing **"AUTO"** symbol will go out. When the latch lever is moved to the left (open) position, the clean indicator light will go out.